


- ① Indicator Light: { Blue Light: In normal operation
Red Light: Abnormal working state
- ② Ground Wire Terminal
- ③ Start Control Terminal
- ④ Positive Input Terminal
- ⑤ High Level Output
- ⑥ adjusts the volume of the specified frequency
- ⑦ selects the specified frequency
- ⑧ Infrasound Filter
- ⑨ Low Pass Frequency Regulation
- ⑩ Frequency Switching: { Full Range: ⑥⑦⑧⑨ are temporarily disabled
Low Pass: ⑥⑦⑧⑨ are working properly
- ⑪ Master Volume Control
- ⑫ Low Level Input

Dimensions & Terminals

INSTALLATION TIP:

- It is forbidden to dismantle and change the product by oneself. disassembly and modification of the product may cause accidents, fire or electric shock.
- This product is recommended for use in automotive environments with a DC voltage range of 12-14.4 v beyond which failure may occur.
- Before wiring, be sure to disconnect the cable from the Power Terminal First, other-wise it is easy to cause short circuit and cause fire.
- Do not use the screws and nuts in the brake system when installing and grounding cables. This will cause the brake system to fail and cause an accident.
- Protect the cable from damage caused by pulling, cutting and short-circuiting.

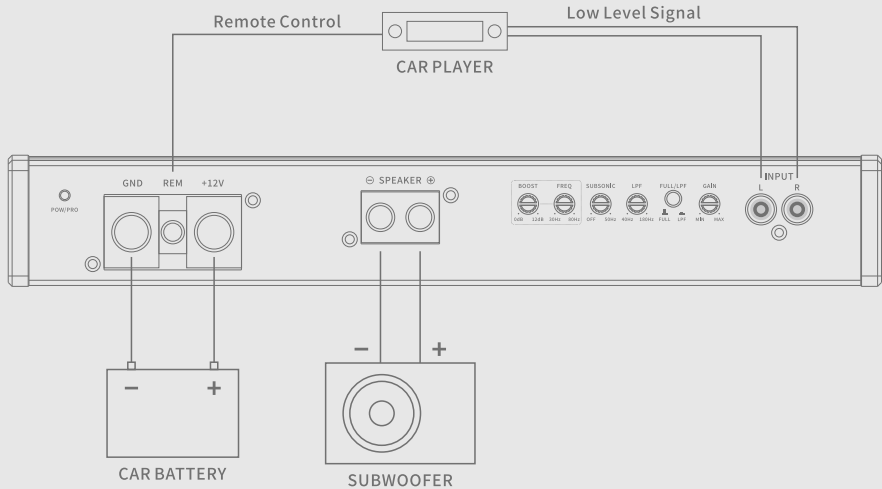

Connection Indicator Diagram

Output Power(RMS)	1×700W @4Ω	Bass Boost	0~12dB (30~80Hz)
	1×1100W @2Ω	Signal To Noise Ratio	>95dB(A-weighted)
	1×1800W @1Ω	Distortion (THD)	<0.05%
Amplifier Type	Class D	Input Sensitivity	0.3 -6 Volts
Frequency Response	10Hz-180Hz/1KHz	Input Resistance	30 Kohms
High Pass Frequency	0-50Hz Adjustable	Operating Voltage	10-16 Volts
Low Pass Frequency	40-180Hz Adjustable	Dimension	337×186×51mm